

These instructions are provided for your safety in order to prevent the risk of Fire, Electric shock or Injury. Please retain for future reference. When fitting is in operation, some parts will become hot; take care when using/handling.

 
- Ensure the lamp type and max wattage is followed- do not exceed. Take care not to overtighten lamp.
- Do not touch the lamp (bulb) or lamp holder while in operation, as both become very hot.
- Turn off and unplug fitting, leaving lamp to cool before changing lamp. Dispose of old lamps carefully.
- Adjust light fitting only when power to the fitting is off and has been left to cool.
- Never leave a fitting without a lamp in position.
- Keep light fitting away from combustible materials such as soft furnishings.
- Ensure children do not play with the light fitting.
- Ensure the light is positioned on a solid, level and non-slip surface and make sure the position of the cable does not pose a trip hazard.
- If the electrical flex or electrical components become damaged at any point, the fitting must be unplugged from the power supply immediately and not operated until the damaged parts are fixed/replaced.
- For use in a dry, indoor environment only. Ensure the fitting does not come into contact with any liquids.

Cleaning and Maintenance

Metal finishes should only be cleaned with a soft, dry cloth. Do not use polishes or abrasives. Bone china can be cleaned using a soft damp cloth with a mild detergent if necessary. Switch off power to the fitting before cleaning. Spare parts are available for this product, please see contact details on the reverse.

Hector Table & Floor Light

Instruction Manual

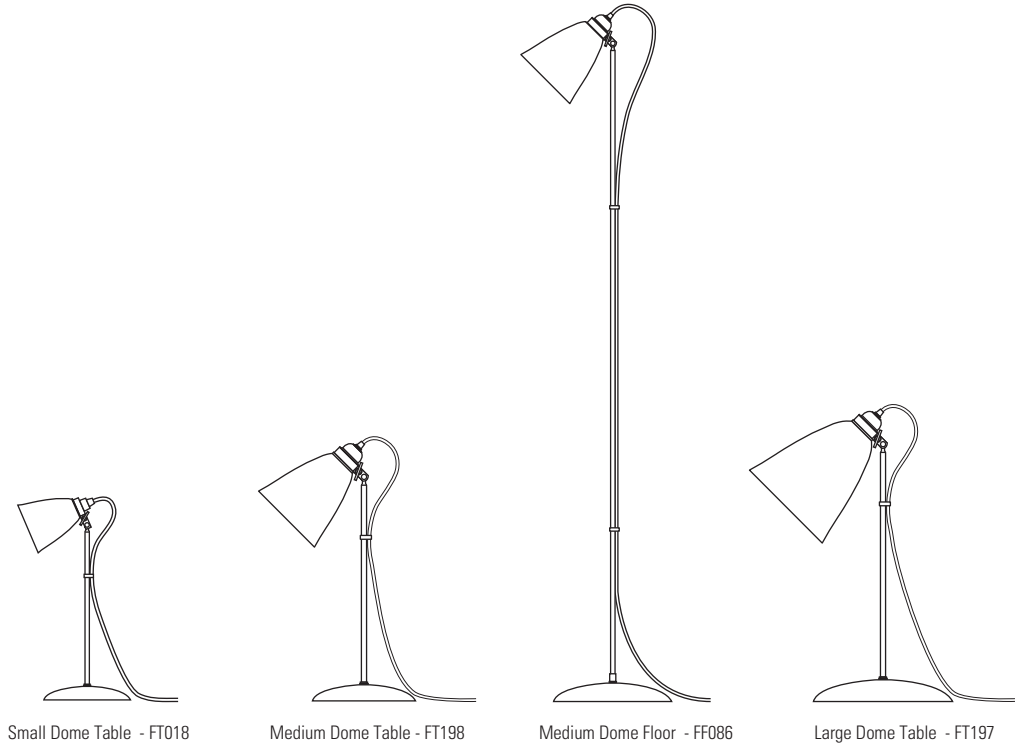

Small Dome Table - FT018

Medium Dome Table - FT198

Medium Dome Floor - FF086

 
 
Large Dome Table - FT197

Small Dome Table - FT018
Medium Dome Table - FT198
Medium Dome Floor - FF086

Small Pleat Table - FT021
Medium Pleat Table - FT380
Medium Pleat Floor - FF388

Small Flowerpot Table - FT155
Medium Flowerpot Table - FT429
Medium Flowerpot Floor - FF430

Small Circle Line Table - FT018CL
Medium Circle Line Table - FT198CL
Circle Line Floor - FF086CL





Linear Table - FT492LW
Linear Floor - FF495

21 Table - FT487

Metal Table - FT315LP
Metal Floor - FF426LP

  Bibendum Table - FT491BW
Bibendum Floor - FF497WR










Established in 1990, Original BTC manufactures relaxed, familiar lighting for traditional and contemporary homes. All products are hand-assembled in Oxford from high quality components, produced in the UK.

Hector Table & Floor Light

| 230V ac 50Hz | IP20 |


FT018	Small Dome Table	FT197	Large Dome Table
FT021	Small Pleat Table		
FT155	Small Flowerpot Table	FF086	Medium Dome Floor
ST018CL	Small Circle Line Table	FF388	Medium Pleat Floor
		FF430	Medium Flowerpot Floor
FT198	Medium Dome Table	FF086CL	Circle Line Floor
FT380	Medium Pleat Table	FF495	Linear Floor
FT429	Medium Flowerpot Table	FF426LP	Metal Floor
FT198CL	Medium Circle Line Table	FF497WR	Bibendum Floor
LFT492	Linear Table		
FT487W	21 Table		
FT315LP	Metal Table		
FT491BW	Bibendum Table		

LAMP GUIDANCE			
BASE	SHAPE	TYPE**	WATTAGE***
 E27	 	INCANDESCENT ✓ CFL ✓ ECO-HALOGEN ✗ LED ✓	40W MAX 11W n/a 7W
LAMP GUIDANCE (Hector Small ONLY)			
BASE	SHAPE*	TYPE**	WATTAGE***
 E14	  	INCANDESCENT (R50 only) ✓ CFL ✓ ECO-HALOGEN ✗ LED ✓	40W 9W n/a 7W
* Use low energy CFL or LED candle/ball lamp for a combination of ambient and low level task lighting or R50 lamp if high level task illumination required.			
** Warm white (2700k) low energy lamps recommended.			
*** Wattage value provided as a guide to suitable lamps. Lower wattage than stated may be used.			

Contents

- A Shade/Stem/Cable Assembly
- B Base*

 *This will be detached from stem in floor version

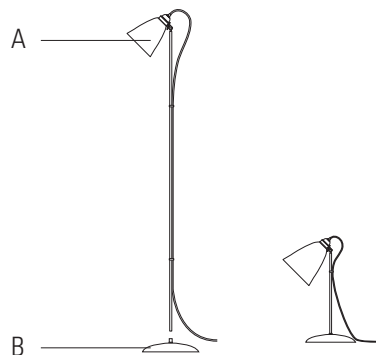

Assembling Base

 
- A Stem
- B Thread
- C Coupler
- D Base

STEP 1

Place base on a level floor (non-slip surfaces work best during assembly).


STEP 2

Support the stem and shade with both hands, then insert the thread into the coupler on the base. Screw the stem into the coupler until a tight, firm fit is achieved (the thread should no longer be visible).

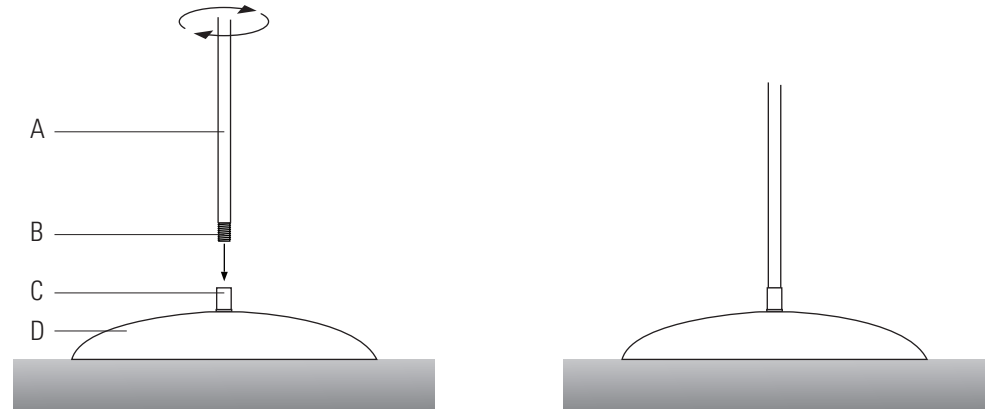

Adjusting Shade

 - With one hand supporting the shade, gently loosen the clamp handle (2). One quarter-turn, in an anti-clockwise direction should be sufficient.
- The shade can then be moved into desired position, ensuring the clamp remains attached to the stem, but without applying excessive force to the washers on the inside of the clamp. Ensure the shade is still supported whilst adjusting position.
- Secure in place by gently tightening clamp handle, **taking care NOT to overtighten**, as this can damage the clamp.
- Do not adjust the position of the shade without loosening the clamp first, as this will damage the washers.

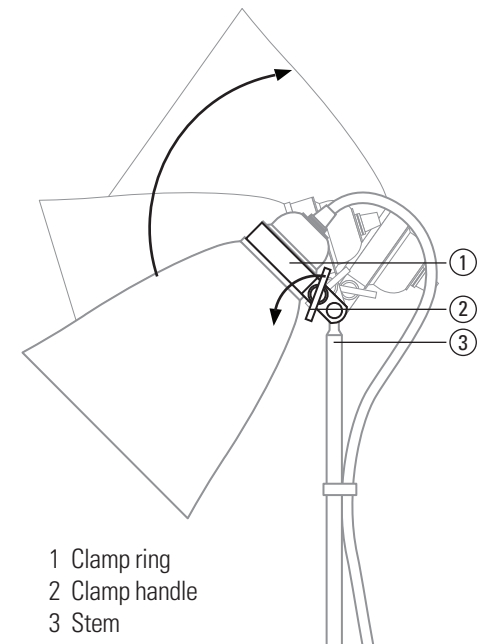

- 1 Clamp ring
- 2 Clamp handle
- 3 Stem